

Operating instructions

**Cordless
LED
working light**

K 10259



Tool Operation

After inserting the battery pack, first press of main switch for all 28 LED to light on. Second press of main switch for 4 LED to light on. Third press of main switch to turn off. (See Fig.1 and Fig.2)



Fig 1



Fig 2

Charging for Clip-Up Battery Type

Fully charge the battery pack before use. To remove the battery pack, withdraw it from the flashlight while pressing the battery knob on the both sides of the battery pack. After charging, insert the battery pack into the flashlight all the way until it locks in place with a little click. (See Fig.3 and Fig.4)



Fig 3



Fig 4

Model No.	K 10259	
Voltage	10.8V dc	
Model	φ 5LED	
Brightness	28 Pcs LED 160 Lux	4 Pcs LED 35 Lux
LED life	3000 Hrs	3000 Hrs
Run-time	9 Hrs	35 Hrs
Tool weight (with battery)	0.433 kg (battery 0.185 kg)	

Charging time

The battery is fully charged after 60 minutes.



Fig 5

Head Angle

1. The handle provides good grip while the light cover can be adjusted in forward direction for 90°. Total of 3 setting at every 30° angle. (See Fig.6)
2. Hook for hanging is behind the light cover. Take out the hook and push upward 180°. After use, press down the hook 180° firmly to install. (See Fig.7)



Fig 6



Fig 7