Release date: 8.11.2016

CONFIDENTIAL

AUTHOR: PASER srl

 
INSTALLATION ESTIMATED IN 1 HOUR AND A HALF

	MITSUBISHI	MITSUBISHI	PLUG AND PLAY CBL059MIDB11	PROTOCOL RESISTIVE
--	------------	------------	-------------------------------	-----------------------

Vehicle	Year	OEM Radio
ASX	2011->	All Models
Lancer	2008->	All Models
Outlander	2007-2012	All Models
Outlander	2013->	All Models

Connector position: Radio location	ANTENNA ADAPTER
Back the radio compartment is located the OEM radio connector	Code: CBLOCANIDEA2

NOTE TUNES ON THE RADIO THE DEFAULT FM STATION AND MEMORIZE THE FREQUENCY 87.7 mHz IN ONE OF THE FREE CHANNEL (EXAMPLE POSITION 1). POWER THE MEDIADAB HD, IT WILL START ON, IT SHOULD APPEAR THE **SCAN** OPERATION. IT TAKES SOME MINUTES. TO MAKE THIS BE SURE THAT THE CAR IS IN AN OPEN SPACE AND THE DAB ANTENNA IS CORRECTLY CONNECTED. ONCE SCAN IS END THE FIRST DAB STATION AVAILABLE SHOULD PLAY.



PRESS VOLUME - THE LED BECOMES ORANGE: PLEASE KEEP IT PRESSED FOR 1 SECOND AND RELEASE IT WHEN THE LED IS RED



PRESS VOLUME + THE LED BECOMES ORANGE: PLEASE KEEP IT PRESSED FOR 1 SECOND AND RELEASE IT WHEN THE LED IS RED



PRESS SEEK - THE LED BECOMES ORANGE: PLEASE KEEP IT PRESSED FOR 1 SECOND AND RELEASE IT WHEN THE LED IS RED



PRESS SEEK + THE LED BECOMES ORANGE: PLEASE KEEP IT PRESS FOR 1 SECOND AND RELEASE IT WHEN THE LED IS RED



PRESS MODE THE LED BECOMES ORANGE: PLEASE KEEP IT PRESS FOR 1 SECOND AND RELEASE IT WHEN THE LED IS RED



PRESS QUICKLY THE BUTTON OF MEDIADAB TO JUMP MUTE FUNCTION, LED BECOMES ORANGE AND TURNS IMMEDIATELY RED



PRESS VOICE THE LED BECOMES ORANGE: PLEASE KEEP IT PRESS FOR 1 SECOND AND RELEASE IT WHEN THE LED IS RED



 






PRESS PHONE DOWN THE LED BECOMES ORANGE: PLEASE KEEP IT PRESSED TILL THE ,ED BECOME GREEN









	QUICK MENU
SWITCH ON VOLUME SEQUENCE	VOL+ VOL- VOL+ VOL-
SWITCH OFF VOLUME SEQUENCE	VOL+ VOL- VOL+ VOL-
ENTER MENU' SOURCE SEQUENCE	OR TROUGHT THE MENU PRESS LONG
MENU' NAVIGATION SEEKS	PREVIOUS SEEK –
CONFIRM A MENU SELECTION PRESS MODE	SHORT PRESS
CHANGE CHANNEL THROUGH SEEK	PREVIOUS SEEK –
CHANGE FAVOURITE CHANNEL THROUGH SEEK	LONG PRESS PREVIOUS CHANNEL
ADD FAVOURITE CHANNEL VOLUME SEQUENCE	VOL+
SCAN	PRESS MODE 3 TIMES