

Glass panel change


In the event you need to change a broken glass range or if you need to reach the structures underneath the glass range, you must break the range.

Detaching the glass

Cut the weld adhesive between the range and the profile with a sharp knife while at the same time prying it with a screw driver, for example.

Gluing the glass

Clean the old adhesive and grease off the profiles well and dry the surfaces. Spread the adhesive in an even strip (\varnothing 4 mm) in the niche of the front, back and side profile. Go around the entire device.

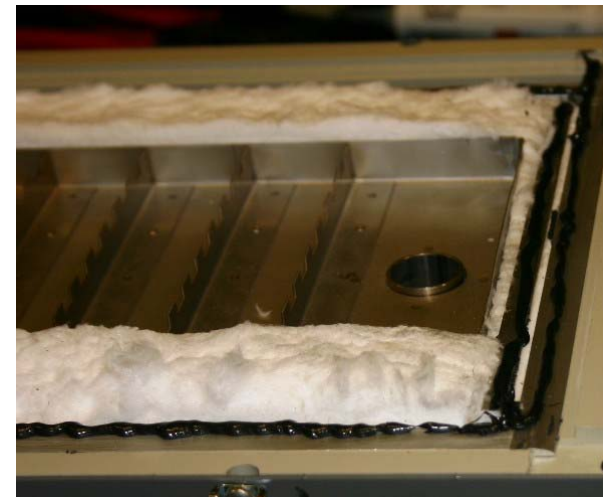

Glass panel change

Press the range carefully in place such that the adhesive does not squeeze from between the range and profile.

When gluing the range, take note of the way the spring of the banjo, located under the range, depresses.

The spring must depress along with the range such that the edges of the range have evenly settled against the profiles.

Preferable is to use the special mounting tool, as shown in the picture. Concentrated weight on a certain area of the range will cause it to warp.

You have six minute's time to apply the adhesive before it starts drying. It will be completely dry after 24 hours.

