

IN8232

Trade Van Racking - Double Unit

THANK YOU FOR PURCHASING A VAN GUARD TRADE VAN RACKING UNIT

TOOLS REQUIRED

TAPE MEASURE X1




SPANNER (10MM / M6) X 2



SPANNER (13MM / M8) X 2



DRILL (Ø8.5) X 1

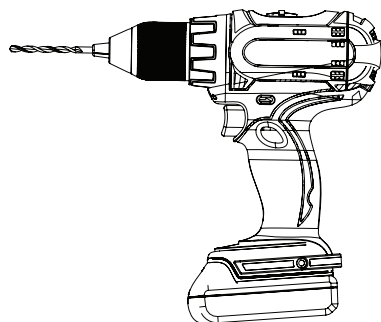

ONE PERSON



FITTING TIME
(APPROXIMATELY)




CAUTION



It is important that care is taken when drilling and fixing to your vehicle.

You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that the fuel line, tyres, fuel tank, wiring loom, exhaust, bodywork and brake lines etc. are not damaged.

If in doubt refer to the vehicle manufacturer's dealership.

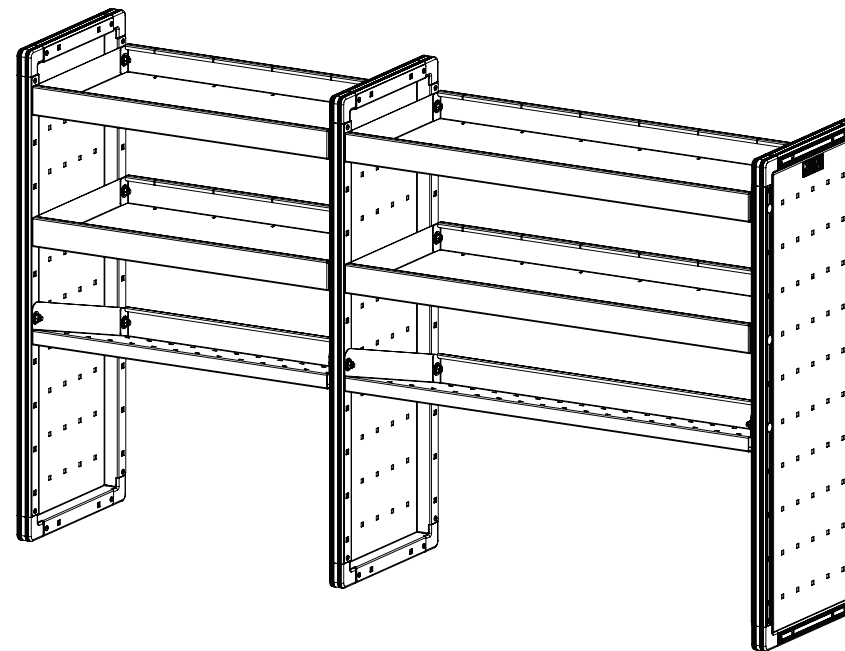

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.

IN8232_B

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk




PLEASE TAKE THE TIME TO READ THROUGH THE IMPORTANT INFORMATION BELOW BEFORE PROCEEDING TO FIT THIS PRODUCT




FAILURE TO TAKE NOTICE OF THE FOLLOWING INFORMATION MAY RESULT IN SERIOUS INJURY AND / OR DAMAGE TO THE VEHICLE.

1. You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that the fuel line, tyres, fuel tank, wiring loom, exhaust, bodywork and brake lines etc. are not damaged. If in doubt refer to the vehicle manufacturer's dealership.
2. When fitting the unit to the side of a vehicle we recommend that the fixing brackets are fixed to the inner steel skin of the vehicle. Fixing to a plywood lining alone is not adequate.
3. When fixing to the side of a vehicle, care should be taken to ensure there is sufficient room between the inner and outer skin, so as not to puncture the outer skin of the vehicle.
4. When drilling, use as short a drill bit as possible to prevent damaging the vehicle. Use corrosion protection when drilling.
5. Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed the vehicle and replaced.
6. We recommend this product is only fitted to vehicles with a full bulkhead.
7. This product must be fixed in place, even if it is not to be fitted inside a vehicle.

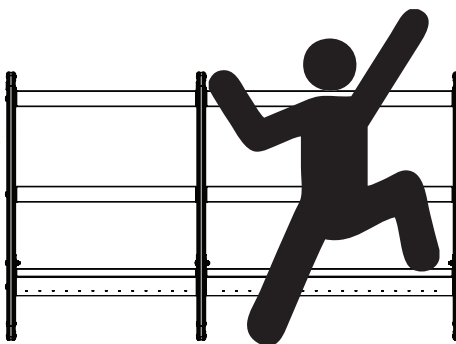

Do not climb or stand on the assembled unit.

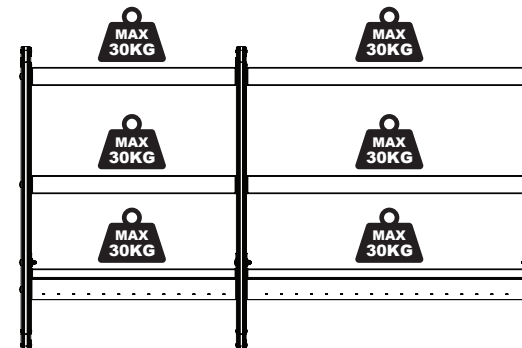

Do not exceed the maximum weight limit of 30KG per shelf.



Wear the appropriate protective equipment (safety glasses & gloves) while fitting this product.



Dispose of packaging materials responsibly - Do not dispose until you have checked all parts and fixings are present.



Retain these fitting instructions for future reference.



It is important that the end user receives this instruction even if they are not the fitter.



WE ADVISE OPENING EACH FIXING KIT WHEN INSTRUCTED AT THE RELEVANT STEP

KT5447

SHELF FIXING KIT


FX4011 X4
(M8 FLANGE NUT)



FX4040 X4
(M8 WASHER)




FX4138 X4
(M8X50 COACH BOLT - BLACK)

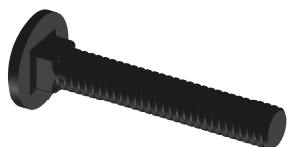

ME0918 X3



ME0919 X6



ME0920 X3



KT5453

FIXING KIT A

FX4002 X9
(M8 NYLOC NUT)




FX4011 X6
(M8 FLANGE NUT)




FX4040 X24
(M8 WASHER)



FX4048 X6
(M8X50 COACH BOLT)

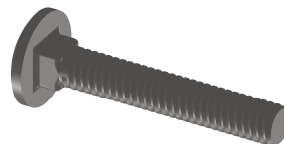

FX4140 X9
(M8X50 HEX BOLT)

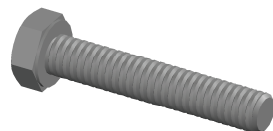

KT5454

FIXING KIT B


FX4011 X12
(M8 FLANGE NUT)



FX4040 X12
(M8 WASHER)



FX4048 X6
(M8X50 COACH BOLT)

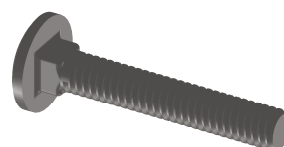

FX4141 X6
(M8X16 COACH BOLT)



KT5455

FIXING KIT C

FX4013 X12
(M6 WASHER)




FX4016 X12
(M6 FLANGE NUT)




FX4040 X12
(M8 WASHER)



FX4061 X12
(M6X14 HEX BOLT)



FX4142 X12
(No14 3/4" SELF TAP SCREW)





SHELF FIXING METHOD (PAGE 1 OF 1)

1.1 Open KT5447 (shelf fixing kit) - This fixing kit will be packed in the same box as the shelves (one fixing kit per shelf) and will provide the fixings required to assemble the shelves to the side panels. See page three for the parts included in this fixing kit.




WE ADVISE OPENING EACH FIXING KIT WHEN INSTRUCTED AT THE RELEVANT STEP



KT5447 SHELF FIXING KIT	KT5453 FIXING KIT A	KT5454 FIXING KIT B	KT5455 FIXING KIT C
FX4011 X4 (M8 FLANGE NUT)	FX4002 X3 (M8 NUT)	FX4011 X12 (M8 FLANGE NUT)	FX4013 X12 (M8 FLANGE NUT)
FX4040 X4 (M8 WASHER)	FX4011 X6 (M8 FLANGE NUT)	FX4040 X12 (M8 WASHER)	FX4016 X12 (M8 FLANGE NUT)
FX4138 X4 (M8X10 COACH BOLT - BLACK)	FX4040 X124 (M8 WASHER)	FX4048 X6 (M8X10 COACH BOLT)	FX4040 X12 (M8 WASHER)
ME0918 X3	FX4048 X6 (M8X10 COACH BOLT)	FX4115 X3 (M8X10 COACH BOLT)	FX4001 X12 (M8 FLANGE NUT)
ME0919 X6	FX4140 X3 (M8X10 HEX BOLT)		FX4142 X12 (M8X10 SELF-TAP SCREW)
ME0920 X3			

IN8232 - PAGE 1 OF 6


1.2 Loosely secure the shelves to the side panels using M8x50 coach bolts, M8 washers and M8 flange nuts.

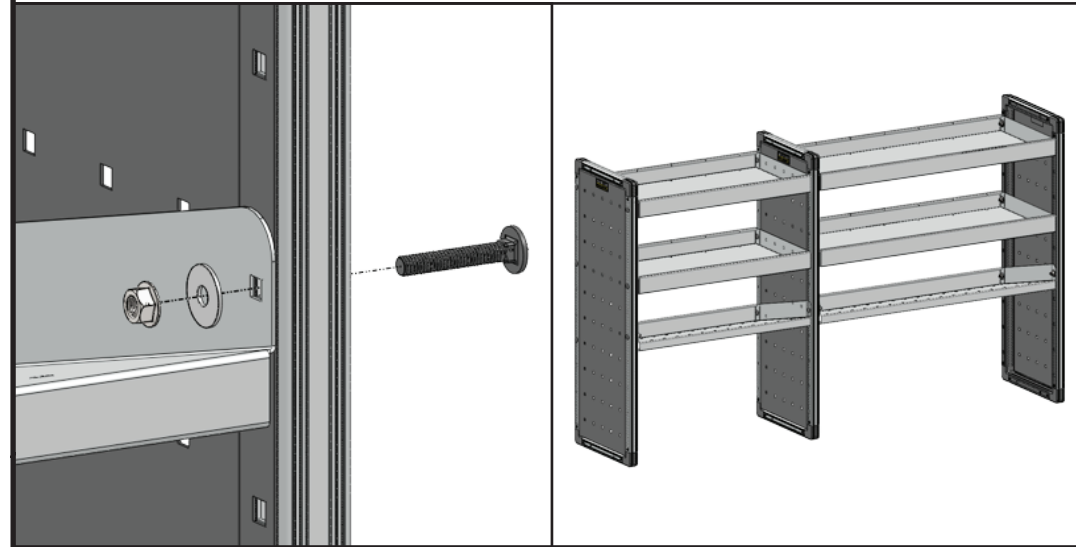

1.3 Ensure the assembled unit is on a flat surface prior to tightening the fixings.

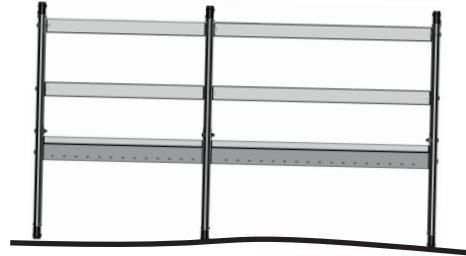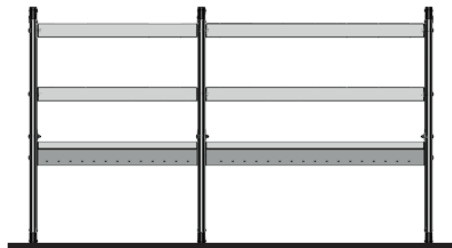

1.4 Tighten all fixings to 5Nm. Take care not to damage the unit by over tightening the fixings.

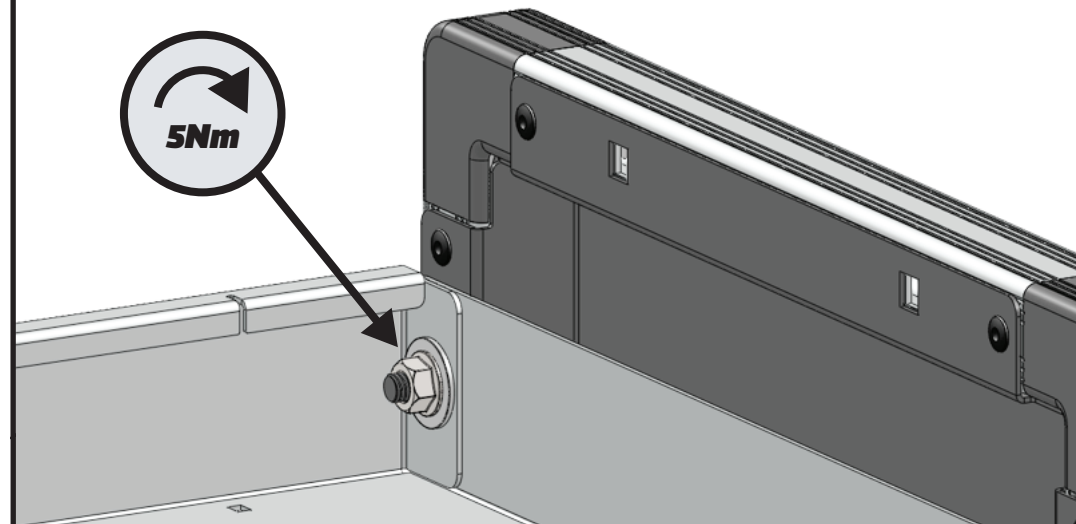




RECOMMENDED FLOOR FIXING METHOD (PAGE 1 OF 2)


2.1 The following steps list our recommended method for fixing the racking unit to the floor of a vehicle. **Prior to proceeding past this point please take the time to read through the important notes on page two.**

PLEASE TAKE THE TIME TO READ THROUGH THE IMPORTANT INFORMATION BELOW BEFORE PROCEEDING TO FIT THIS PRODUCT




FAILURE TO TAKE NOTICE OF THE FOLLOWING INFORMATION MAY RESULT IN SERIOUS INJURY AND / OR DAMAGE TO THE VEHICLE.


- You should note that it is the responsibility of the installer to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that the fuel line, tyre, fuel tank, wiring loom, exhaust, bodywork and brake lines etc. are not damaged. If in doubt refer to the vehicle manufacturer's dealership.
- When fitting the unit to the side of a vehicle we recommend that the fixing brackets are fixed to the inner steel skin of the vehicle. Fixing to a plywood lining alone is not adequate.
- When fixing to the side of a vehicle, care should be taken to ensure there is sufficient room between the inner and outer skin, so as not to puncture the outer skin of the vehicle.
- When drilling, use as short a drill bit as possible to prevent damaging the vehicle. Use corrosion protection when drilling.
- Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed the vehicle and replaced.
- We recommend this product is only fitted to vehicles with a full bulkhead.
- This product must be fixed in place, even if it is not to be fitted inside a vehicle.




Do not climb or stand on the assembled unit

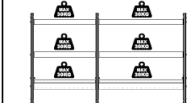


Do not exceed the maximum weight limit of 20KG per shelf




Wear the appropriate protective equipment (safety glasses & gloves) while fitting this product.



Dispose of packaging materials responsibly - Do not dispose until you have checked all parts and fixings are present.



Retain these fitting instructions for future reference.



It is important that the end user retains this instruction even if they are not the fitter.

IN8232 - PAGE 2 OF 8

2.2 Open KT5453 (fixing kit A) - This fixing kit will provide the fixings to fix the unit to the floor of a vehicle. See page three for the parts included in this fixing kit.




WE ADVISE OPENING EACH FIXING KIT WHEN INSTRUCTED AT THE RELEVANT STEP


KT5447 SHINY FLOOR KIT FX4011 X4 (M8 FLANGE NUT)	KT5453 FIXING KIT A FX4002 X3 (M8 NUT)	KT5454 FIXING KIT B FX4011 X12 (M8 FLANGE NUT)	KT5455 FIXING KIT C FX4013 X12 (M8 NUT)

IN8232 - PAGE 3 OF 8

2.3 Secure the floor brackets (ME0918) to the side panels using M8x50 coach bolts, M8 washers and M8 flange nuts. Tighten to 5Nm. **Take care not to damage the unit by over tightening the fixings.**

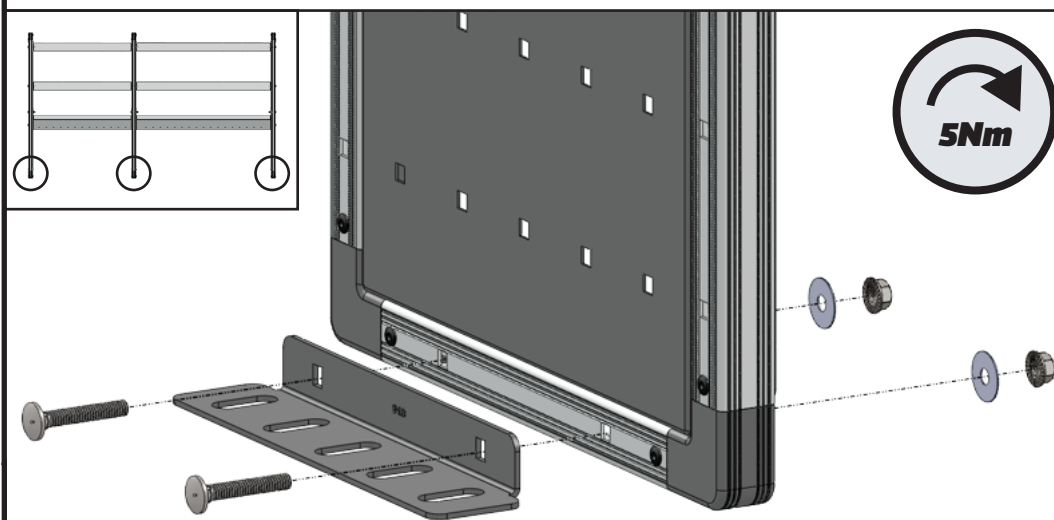

2.4 Position the unit inside the vehicle in desired position.

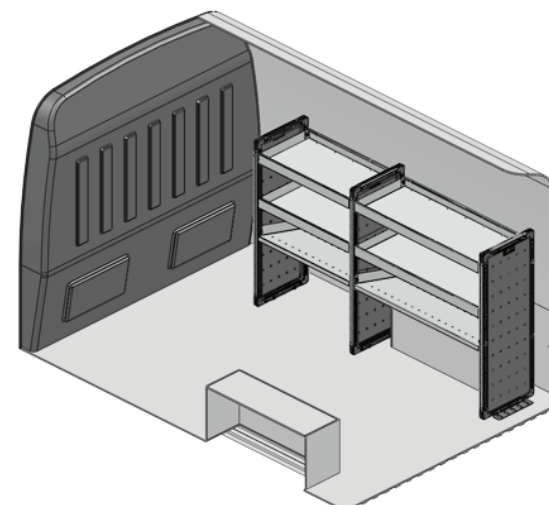



2.5



CAUTION




It is important that care is taken when drilling and fixing to your vehicle.

You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that the fuel line, tyres, fuel tank, wiring loom, exhaust, bodywork and brake lines etc. are not damaged.

If in doubt refer to the vehicle manufacturer's dealership.


2.6

Measure from the side and rear of the vehicle and note down the positions of the floor brackets. Use the same measurements underneath the vehicle to check that the underside is clear of any obstructions so drilling can take place.

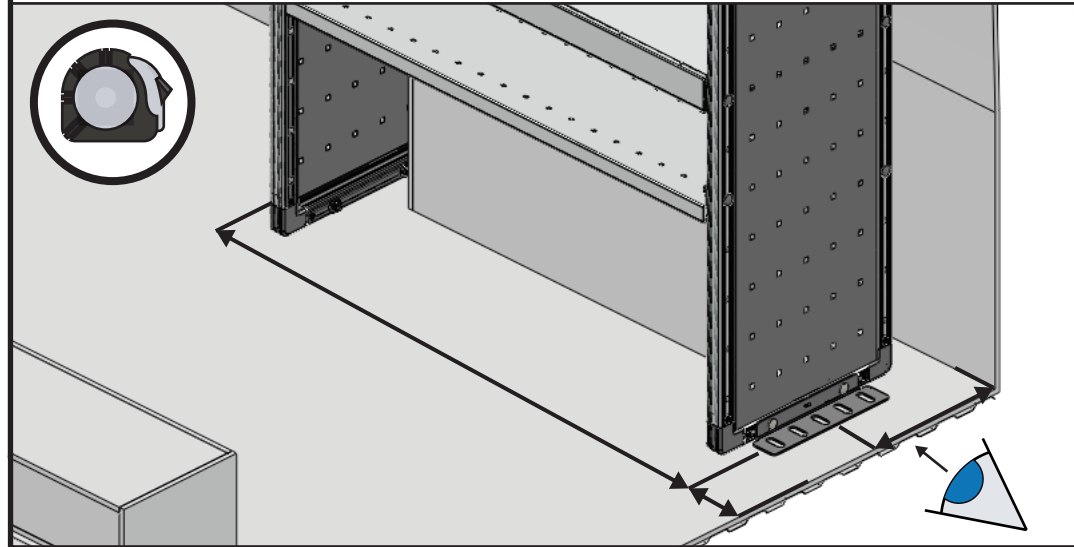


2.7

After ensuring the area under the floor bracket / vehicle floor is free from obstruction, mark the hole centres of the fixing slots. Move the unit to one side and drill Ø8.5mm through the floor of the vehicle (three positions for each bracket).

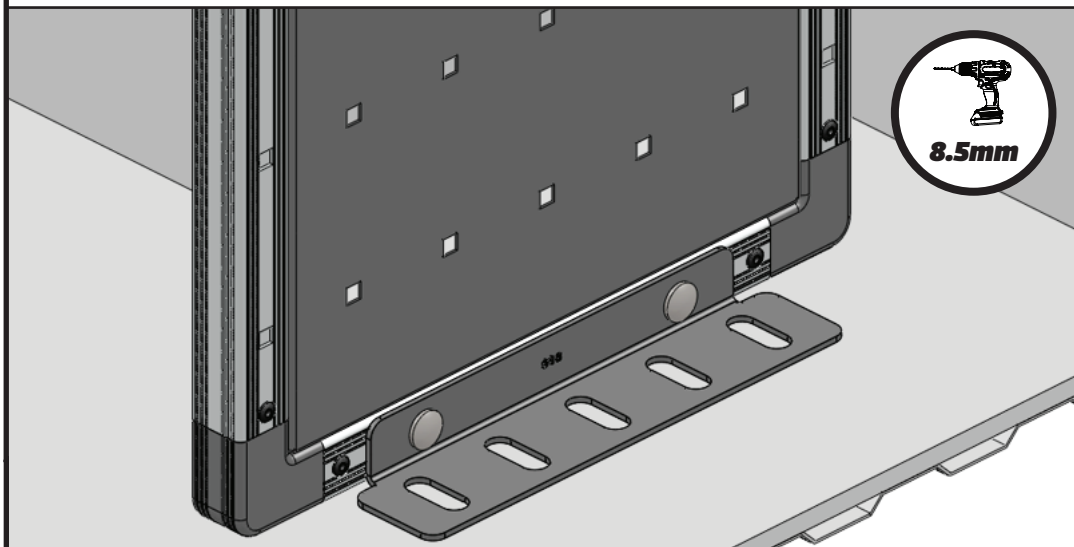

2.8

Bolt down through the floor brackets using M8x50 hex bolts and M8 washers, secure underneath the vehicle using M8 washers and M8 nyloc nuts.

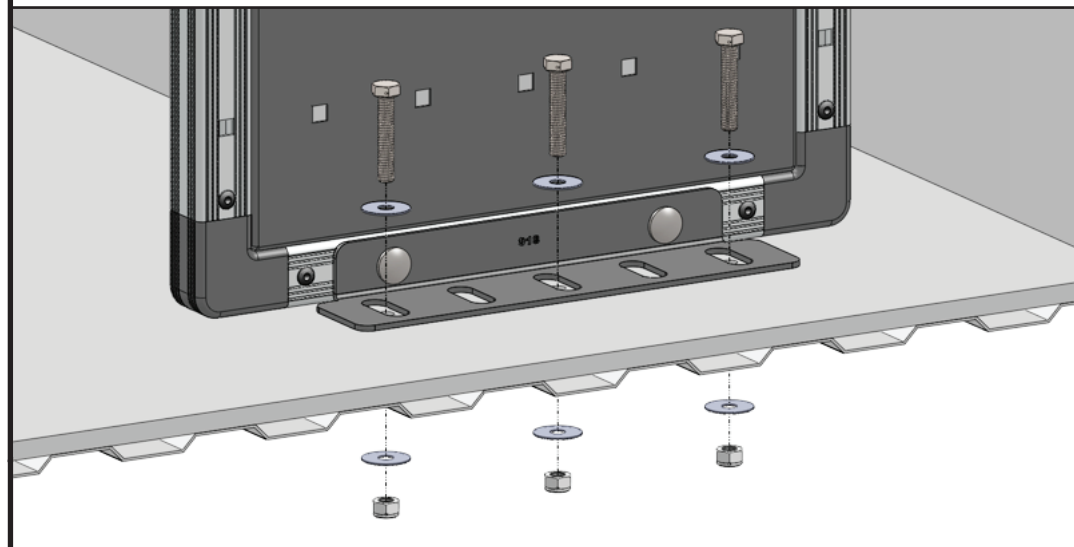



RECOMMENDED SIDE FIXING METHOD (PAGE 1 OF 2)

3.1 The following steps list our recommended method for fixing the racking unit to the side of a vehicle. **Prior to proceeding past this point please take the time to read through the important notes on page two.**

PLEASE TAKE THE TIME TO READ THROUGH THE IMPORTANT INFORMATION BELOW BEFORE PROCEEDING TO FIT THIS PRODUCT

FAILURE TO TAKE NOTICE OF THE FOLLOWING INFORMATION MAY RESULT IN SERIOUS INJURY AND / OR DAMAGE TO THE VEHICLE.

- You should note that it is the responsibility of the installer to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that the fuel line, tyre, fuel tank, wiring loom, exhaust, bodywork and brake lines etc. are not damaged. If in doubt refer to the vehicle manufacturer's dealership.
- When fitting the unit to the side of a vehicle we recommend that the fixing brackets are fixed to the inner steel skin of the vehicle. Fixing to a plywood lining alone is not adequate.
- When fixing to the side of a vehicle, care should be taken to ensure there is sufficient room between the inner and outer skin, so as not to puncture the outer skin of the vehicle.
- When drilling, use as short a drill bit as possible to prevent damaging the vehicle. Use corrosion protection when drilling.
- Regularly inspect all fixings and parts. Any damaged or worn parts should be immediately removed the vehicle and replaced.
- We recommend this product is only fitted to vehicles with a full halfload.
- This product must be fixed in place, even if it is not to be fitted inside a vehicle.

Do not climb or stand on the assembled unit.

Do not exceed the maximum weight limit of 30KG per shelf.

Wear the appropriate protective equipment (safety glasses & gloves) while fitting this product.

Dispose of packaging materials responsibly - Do not dispose until you have checked all parts and fixings are present.

Retain these fitting instructions for future reference.

It is important that the end user receives this instruction when it they are not the fitter.

IN8232 - PAGE 2 OF 8

3.2 Open KT5454 (fixing kit B) & KT5454 (fixing kit C) - These fixing kits will provide the fixings to fix the unit to the side of a vehicle. See page three for the parts included in these fixing kits.



WE ADVISE OPENING EACH FIXING KIT WHEN INSTRUCTED AT THE RELEVANT STEP

KT5447 SHINY (FIXING KIT A)	KT5453 FIXING KIT B	KT5454 FIXING KIT C	KT5455 FIXING KIT D
FX4011 X4 (M8 FLANGE NUT)	FX4002 X3 (M8 NUT LOCK NUT)	FX4011 X12 (M8 FLANGE NUT)	FX4013 X12 (M8 WASHER)
FX4040 X4 (M8 WASHER)	FX4011 X6 (M8 FLANGE NUT)	FX4040 X12 (M8 WASHER)	FX4016 X12 (M8 FLANGE NUT)
FX4138 X4 (M8x50 COACH BOLT) (BLACK)	FX4040 X124 (M8 WASHER)	FX4048 X6 (M8x50 COACH BOLT)	FX4040 X12 (M8 WASHER)
ME0918 X3	FX4048 X3 (M8x50 COACH BOLT)	FX4113 X3 (M8x50 COACH BOLT)	FX4084 X12 (M8x16 HEX BOLT)
ME0919 X6	FX4140 X3 (M8x50 HEX BOLT)		FX4142 X12 (M8x50 SELF TAP SCREW)
ME0920 X3			

IN8232 - PAGE 3 OF 8

3.3 Each side panel requires 2x fixing brackets as shown in FIG.1. Secure the fixing brackets (ME0919) to the unit in the required positions using M8x50 coach bolts, M8 washers and M8 flange nuts as shown in FIG.2. **Take care not to damage the unit by over tightening the fixings.** Ensure the fixing brackets are positioned to pick up on the inner steel skin of the vehicle and are not against the outer skin. If required an extension bracket can be used as shown in FIG.3.

FIG.1

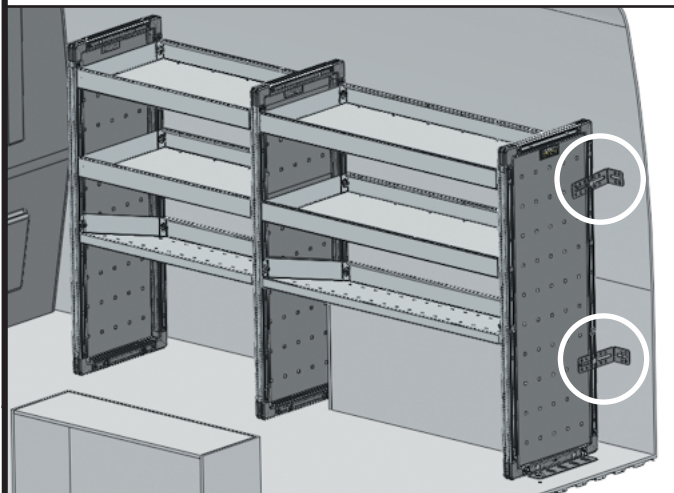


FIG.2


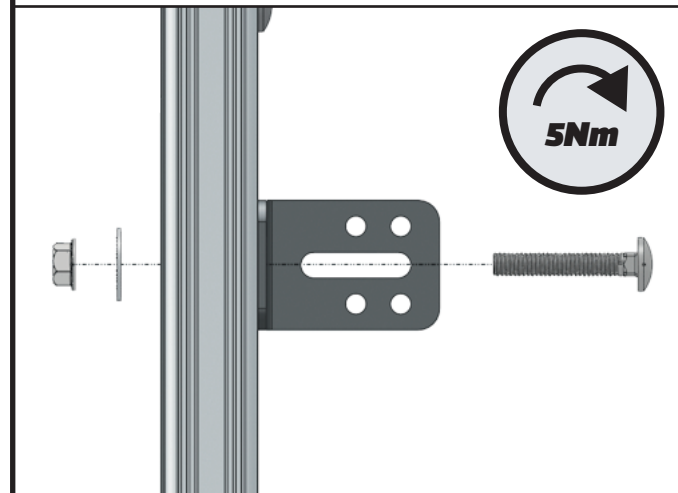


FIG.3





3.4

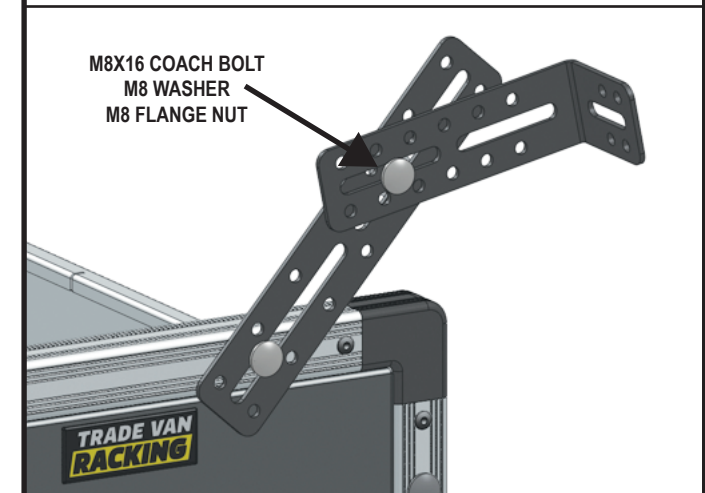

CAUTION




It is important that care is taken when drilling and fixing to your vehicle.

You should note that it is the responsibility of the installer/s to ensure that when drilling holes in to your vehicle to take fixings, care must be taken to ensure that the fuel line, tyres, fuel tank, wiring loom, exhaust, bodywork and brake lines etc. are not damaged.

If in doubt refer to the vehicle manufacturer's dealership.

3.5

Check the positions behind the fixing brackets are free from obstruction (wiring looms / electrical wires etc.). Once checked carefully drill through the fixing bracket holes using a suitable drill bit for the fixing.

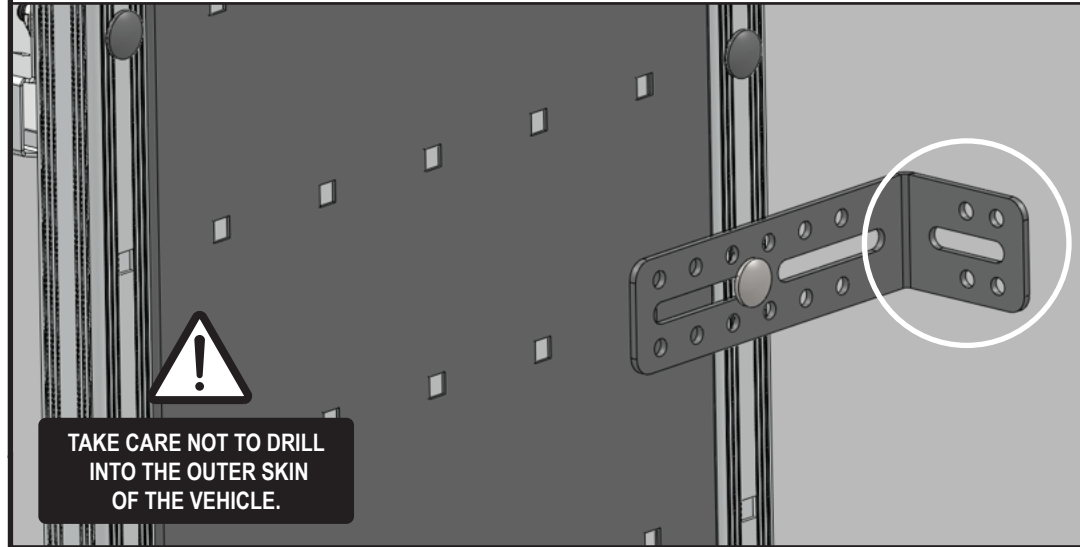

3.6

Secure the fixing brackets to the side of the vehicle using M6x14 hex bolts, M6 washers and M6 flange nuts.

